

GM OIL FILTER PG2222 INSTALLATION PROCEDURE

These filters will require attention to this protocol while being installed to insure a proper seal; torquing to specification is of particular importance.

Please follow the installation instructions below for this filter application.

1. Make certain that the gasket from the previous filter is not still attached to the mounting plate and then clean seating area for the new installation.
2. Lubricate new gasket.
3. Install new filter on threaded stud.
4. Tighten by hand $\frac{3}{4}$ to 1 turn after gasket contacts base.
- 5. TORQUE TO 30 Nm (22 foot pounds) until fully sealed.**
6. Add oil to proper level. Start engine and carefully check filter area for leaks.

